

ASSEMBLY INSTRUCTIONS

6. Connect the power cables at the back corners of the modules (Figure 5). The Right 2 Seat module connects to the Armless Chair (1) and the Armless Chair connects to the Corner module (2). The remaining Left 2 Seat module connects to the Corner module (3).



Figure 5

7. Connect the 2 power supply cords which were set aside in Step 2 to each corner of the suite. Connect the 4 power plugs to power outlets and switch on. The Left 2 Seat module and Right 2 Seat module will each have 2 power plugs to connect. Ensure the red switches at the rear corners of the suite are on.
8. Your suite assembly is complete.

TROUBLESHOOTING

If you are having any issues please try the following solutions.

- Push and hold the LIGHT button to change the base and cup holder light colours.
- Unplug the suite for 5 minutes to reset all electrical components.
- The USB ports on the charge station are low voltage. Please use the 240V socket if you are charging a larger device or require a faster charge.
- Check that all plugs are plugged into the power outlet and are secure. Please check that the power outlet is switched on. Check the red switches at the rear of the suite are on.
- Check to ensure that all connection cords are properly connected, as per the step by step instructions. There are multiple connections, any of which being too loose may cause performance issues.
- Ensure no cords are pulled too tight. If the cord does not reach its destination with ease you may be trying to plug it into the wrong location. Please refer back to the step by step instructions to double check. If it is still too short/tight, please contact the store you purchased the suite from.
- Ensure there is nothing obstructing the recliner movement.
- Try plugging the suite into a different power outlet.
- Ensure the correct back is on the correct base – Eg: left back is on left base.
- Please check all connections before contacting the store for more help.

If the suite continues to fail please contact the store from which it was purchased from.

Synargy is a registered responsible supplier on ERAC. Electrical components within our products have been tested and comply with all legal requirements imposed for electrical safety and EMC.



Model: 661939-CNR



WARNING! ENTRAPMENT OR CRUSHING RISK

Ensure there is no person, animal or item obstructing the area under the footrest before operating this device.



SAFETY INSTRUCTIONS

Please read these instructions carefully before operating.

- Improper use or installation may result in the risk of fire, electric shock and/or injury. We assume no liability for any eventual damages caused by improper use or inappropriate handling, or by any other non-compliance with the instructions in this manual.
- This product contains moving parts. Keep fingers, hair and body parts well clear from moving parts. To reduce the risk of injury, keep children and pets clear of the product when in use.
- Supervise children or disabled persons using this product.
- Ensure sufficient space around this product for operating the reclining back and footrest. Remove any objects which obstruct moving parts.
- Do not sit or place additional weight on the arms, back or open footrest.
- This product is very heavy. Only move this product by lifting the main body. Never drag by the footrest, back or arm rest.
- Return this product to the full upright position to exit safely and prevent a tripping hazard.
- Do not operate this product if damage is visible in any form.
- Do not modify or use unauthorised substitute parts.
- This product has been designed and intended for indoor residential use only. It is not suitable for commercial or outdoor use.
- This product is not intended to be used as part of a health care plan. Consult your medical professional before operating if you are taking medication or have physical limitations.
- Do not exceed the maximum 120kg weight limit for this product.



ELECTRICAL SAFETY

Please read these instructions carefully before operating.

- Never force the back or footrest to close faster than the electric motor.
- Before commencing cleaning or maintenance, ensure this product is disconnected from the power outlet and back is in the full upright position.
- Disconnect this product from the power outlet before moving.
- Cease operation and disconnect from the power outlet if you ever detect a burning odour or smoke coming from the product.
- Do not operate this product if liquid spillage occurs on or around it. Disconnect from the power outlet and allow product to completely dry before reconnecting.
- Do not operate the power functions or charge station with wet hands.
- Check the condition of the power cord, electrical cords, transformer, plug and connector on a monthly basis. Do not operate if wear is visible.
- Ensure the power cord, electrical cords and transformer are clear of moving parts and not trapped underneath the base.
- Position the power cord to minimise a tripping hazard.
- Never attempt to open or disassemble electrical components.
- We recommend the use of a surge protector (not included).

ASSEMBLY INSTRUCTIONS

Please read these instructions carefully before assembling.

1. Assemble this product in an open space with room to move. There are four modules— 1 x Left 2 Seat module, 1 x Right 2 Seat module, 1 x Armless Chair and 1 x Corner module.
2. Remove the 2 power supply cords tied to the metal posts on the Left 2 Seat module and Right 2 Seat module and set aside for Step 7.
3. Connect the seat backs to the bases of each module by sliding the metal receivers on the seat back into the metal posts on the base (Figure 1). Ensure the correct seat back has been selected and that both sides align before pushing down firmly into place. The seat backs are heavy. Ask for help if you need assistance aligning the posts and receivers.

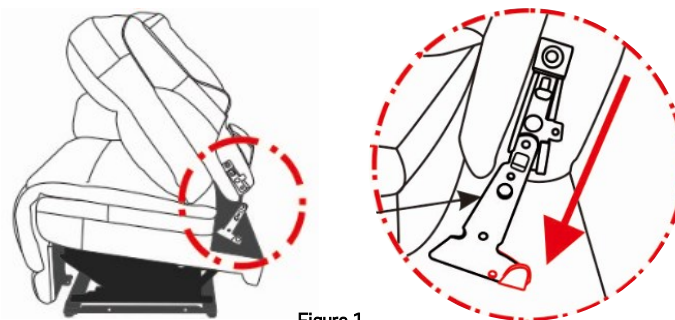


Figure 1

4. On the end seats of the Left 2 Seat module and Right 2 Seat module, connect the two power cables for the Power Headrest (Figure 2). On the inside seats connect the LED Light power cables (Figure 3). Check all connections are firm before velcroing the backs down onto the base.

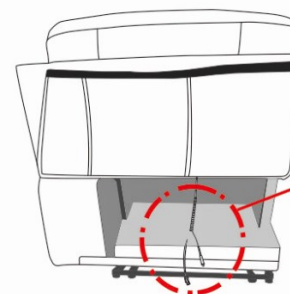


Figure 2

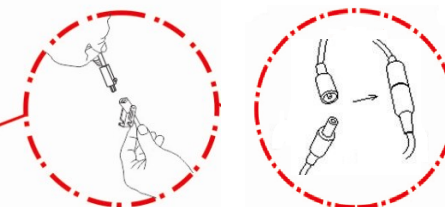


Figure 3

5. Using the brackets down the side of each module (Figure 4), connect the Left 2 Seat module to the Corner module. Connect the Corner Module to the Armless Chair and the Armless Chair to the Right 2 Seat module. **NOTE: The Armless Chair can go on either side of the Corner module.**

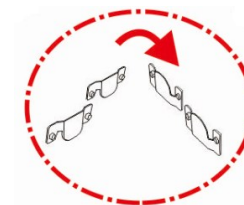


Figure 4